



# NGX10 Camera System Set up Guide

## SYSTEM INCLUDES:

- 1½" CSL Camera Head
- Reel with 200ft of push rod and monitor connection cord
- CBX17 or CBX15 Monitor/Control Box
- Removable USB (Flash) Drive
- MyTana WiFi Router (Dongle)



As you unpack your system, make sure all parts are included. Contact us if something is missing or damaged.

A 3-prong extension cord is needed to power the system

**IMPORTANT:** Connect the camera patch cord BEFORE powering the system ON

Below are a few steps to set up and use the reel

- ▶ See the included Control Box and Viewer APP **User Guides** for detailed operating instructions.

## Install camera head onto the pushrod

Align pushrod end and camera head ends together.

Screw in the camera head into the push rod, putting back pressure on both the pushrod and camera head to make solid connection.




## Patch cord from camera reel to the monitor



Make sure cord notch is properly aligned when connecting to the Control Box

## Adjustments

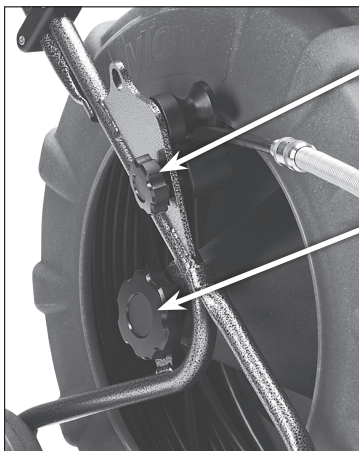


**Adjustment knob:** Allows the pushrod wheel to move up and down for easy access.

**Tension knob:** Adjusts the tension of the reel. • **Clock-wise tightens**, • **Counter clockwise loosens** the reel for free movement.

## Disconnecting the pushrod from the reel

To remove or change out the pushrod

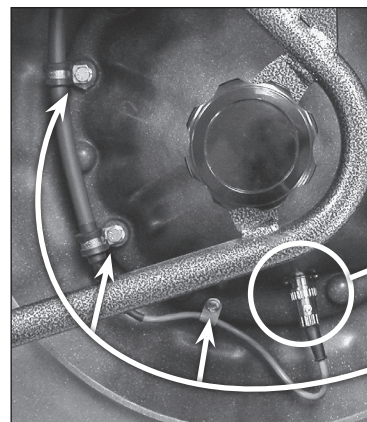

See our video of this process at [YouTube.com/videoMyTana](https://www.youtube.com/watch?v=videoMyTana). (in the Inspection Playlist)

1. Unscrew the camera head from the push rod
2. Disconnect the connector from the plug
3. Remove the 3 screws attaching the pushrod to the reel

050417

Manufacturers of Quality  
Sewer & Drain Cleaning  
Equipment since 1957

[www.MyTana.com](http://www.MyTana.com)

746 Selby Ave • St. Paul MN, 55104  
fax: 651.222.1739

**1.800.328.8170**

Factory Direct Customer Service  
M-F 7am - 5pm CST  
Competent • Polite • Clear